A guide to the **safe use** of

Support Stands

from *groundhog**



To achieve the **maximum life expectancy** and **best performance**, your mobile welfare unit should be serviced and inspected at regular intervals.

The new portable **Support Stands** from **groundhog**° allow for servicing, inspection and maintenance on site.

For **safe use of the groundhog**° **Support Stands**, please follow the instructions below:

Suitable for ALL TWIN AXLE MOBILE UNITS

from *groundhog*°



Safe working practice



Position unit on clean, even, flat, firm ground.



Cordon off area (if necessary).



Visually check Support Stands for signs of damage (cracked welds, missing sword pins). If any damage is found do not use service stands.



DO NOT rely on the hydraulic legs

when working on the undergear



While working under unit, hard hat and eye protection should be worn at all times.

NOTE: Full working instructions on how to raise and lower the unit are located on the nosecone.



Raise unit fully on all four hydraulic rams.



Position Support Stands to all four hydraulic rams and secure using sword pins attached.



Remove hydraulic power pack lead from socket under nosecone. (Advised for Health & Safety).

The unit can now be serviced safely.

If you require further information on the safe use of Support Stands, please contact **groundhog**° on: